

Guide to Assembly & Usage

WPD23

Information
If in doubt, contact the supplier

Read this Guide thoroughly before commencing assembly & retain for future reference

Before commencing assembly, unpack carefully & check that all components ordered are included

Assembly should be undertaken by two competent people

Tools – Rubber faced mallet

Assess for floor fixing. Tall narrow bays may require this to ensure stability

Caution
During assembly, ensure to:

Take care during assembly & in use, particularly when lifting or stretching & when using tools

Assemble & locate for use on a suitable level floor surface. Allow adequate working space

Dispose of packaging materials responsibly

Warning
Rules for the safe use of workstations:

Ensure these instructions are retained for reference & that users are aware of the rules for safe use

NEVER CLIMB ON THE STRUCTURE OR STAND ON THE SHELVES

DO NOT LEAN OR SUPPORT LADDERS, STEPS, OR OTHER OBJECTS AGAINST WORKSTATION

ALWAYS USE SAFETY STEPS TO REACH HIGH SHELVES

Do not use in damp or wet conditions

Load heavy items on the lower shelves & lighter items on the higher shelves

This product is designed for hand loading only

ENSURE THAT THE MAXIMUM LOAD CARRYING CAPACITIES ARE NOT EXCEEDED


PLEASE REFER TO THE LOADING CHART SUPPLIED FOR DETAILS



COMPONENT CHECK LIST

Component	Quantity
A Upright	2
B Upright	2
C Upright	2
D Side Beam for Top Shelf	4
E Side Beam for Worktop & Base (Varies according to depth)	4
F Front & Back Beam (Varies according to width)	6
G Centre Support (Varies according to depth)	6
H Chipboard for Top Shelves	2
I Chipboard for Worktop	1
J Plastic Protective Foot	6

ASSEMBLY INSTRUCTION

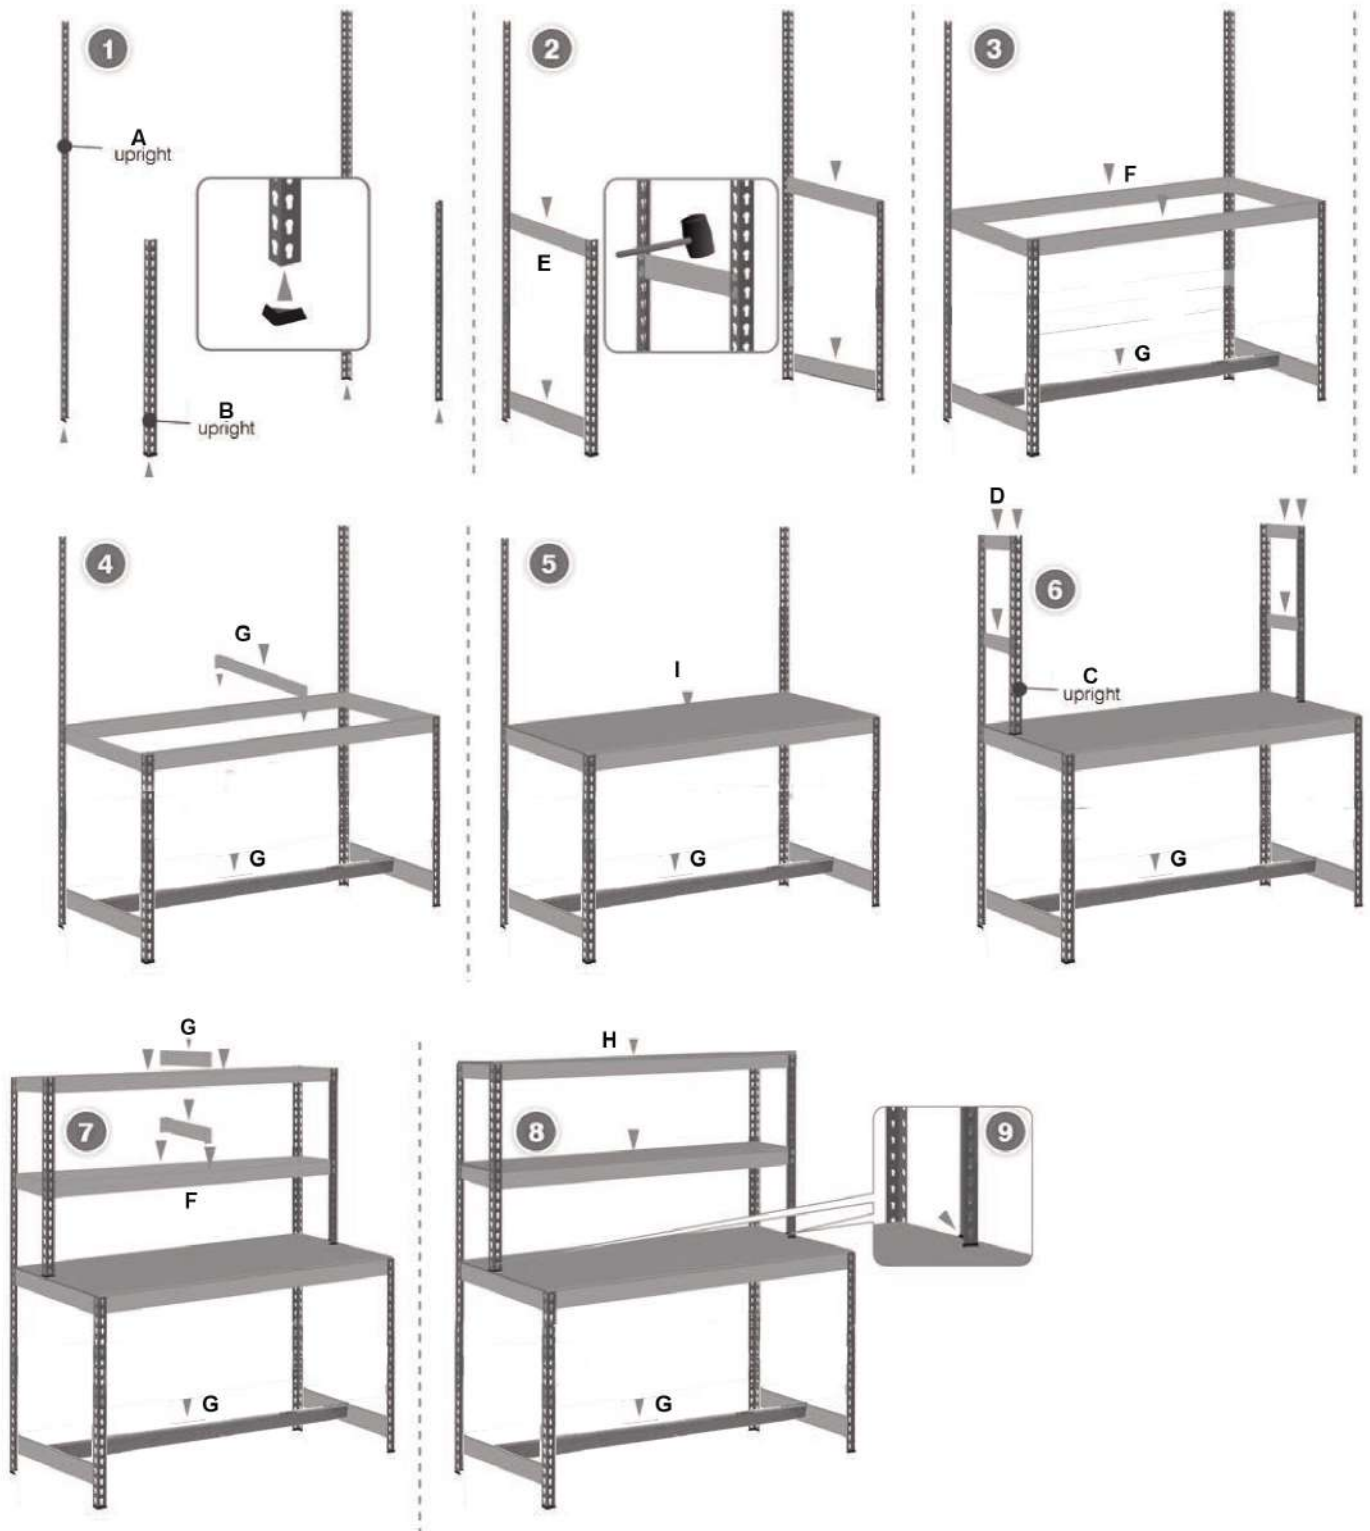

1. Attach plastic feet to all 6 uprights,

2. With another person holding the uprights, place the **A** upright to the back and the **B** to the front. Now tap the side beams in at the required positions for the worktop (top 2 holes) and lower shelf level.

3. The face beams for the worktop should be positioned in the top two holes of the **B** upright. Locate the long centre support on the lower beam

4. Now insert the front to back deck support in the main work station level

5. Now you can add the thick shelf to the work top

6. Now position the **C** uprights on top of the work top ready to tap in the side beams, position side beams as necessary.

7. Repeat for the face beams and then add the front to back deck support to both levels.

8. Add the thick chipboard panels to each shelf level.